
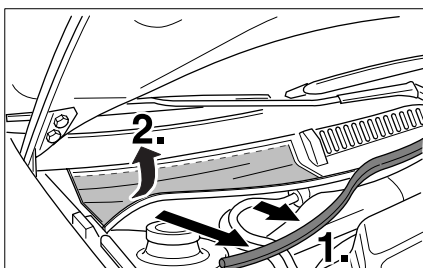
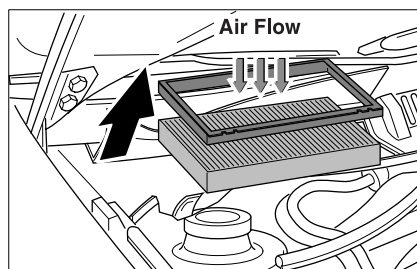
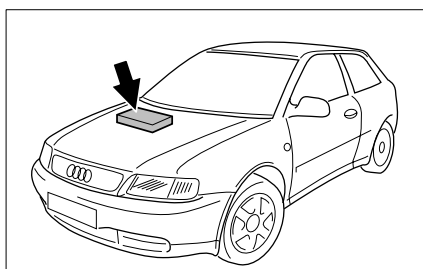
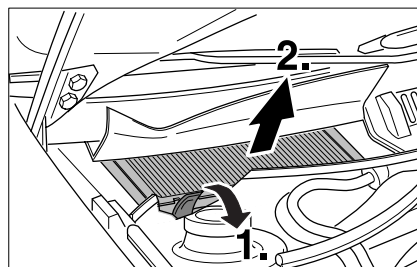






1 987 432 012  
1 987 432 312

Audi A 3	09.96 →
Seat Cordoba/optional	09.93 →
Seat Ibiza/optional	03.93 →
Seat Inca	11.95 →
Seat Toledo	06.95 →
Skoda Oktavia	09.96 →
VW Lupo	06.98 →
VW Caddy	11.95 →
VW Golf III/Vento	04.93 →
VW Polo	10.94 →

- |  |   |
|--|---|
| <b>D</b> Innenraumfilter<br>Montageanleitung         | <b>NL</b> Interieurfilter<br>Montagehandleiding                           |
| <b>GB</b> Cabin filter<br>Installation instructions  | <b>E</b> Filtro ventilacion<br>para interior<br>Instrucciones de montaje  |
| <b>F</b> Filtre d'habitacle<br>Notice de montage     | <b>P</b> Filtro de purificação<br>do habitáculo<br>Instruções de montagem |
| <b>I</b> Filtro abitacolo<br>Istruzioni di montaggio | <b>S</b> Kupéfilter<br>Installationsanvisning                             |






**BOSCH**

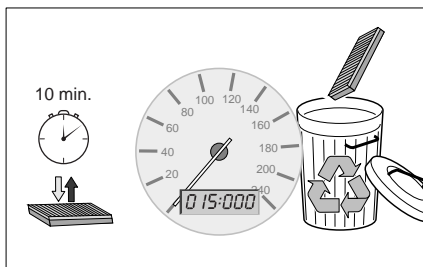

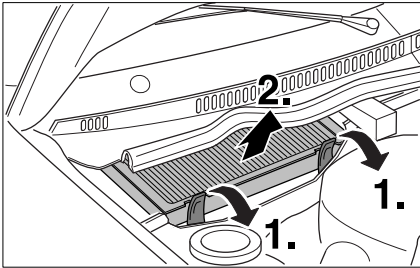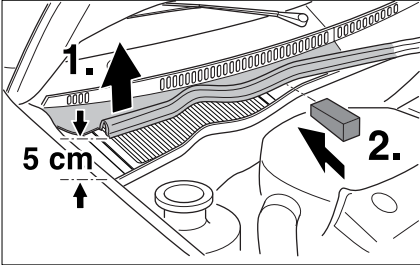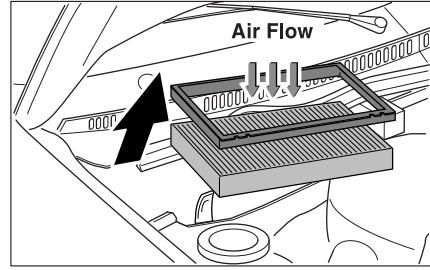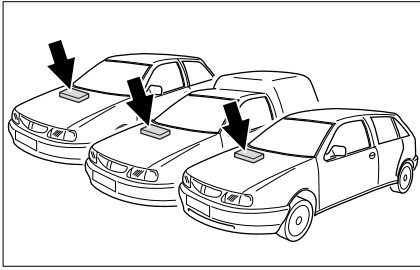





4 Seat Cordoba/Ibiza/Inca

Seat Cordoba/Ibiza/Inca 5

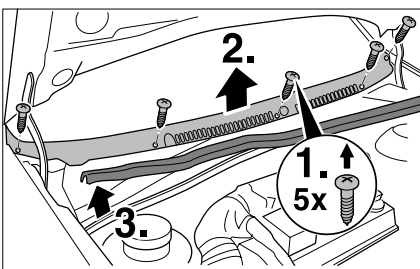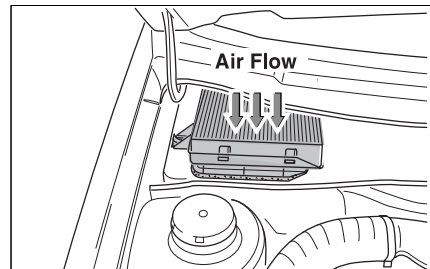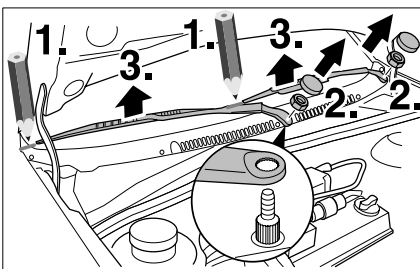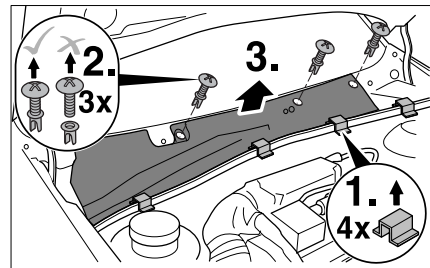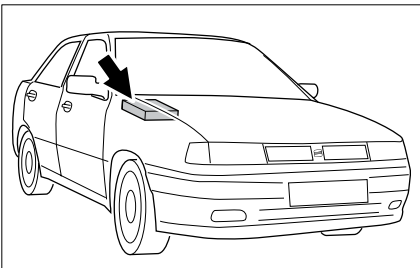





6 Seat Toledo

Seat Toledo 7

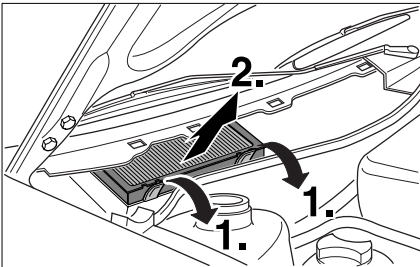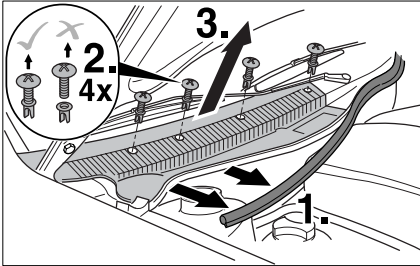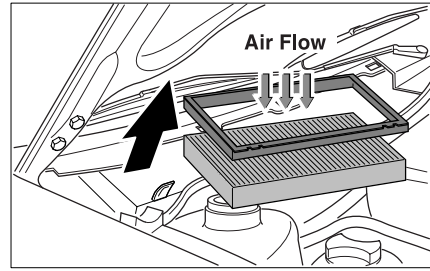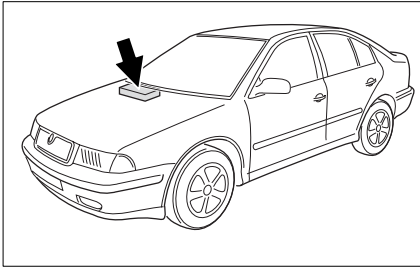






8 Skoda Octavia

Skoda Octavia 9

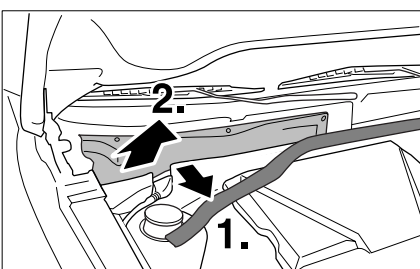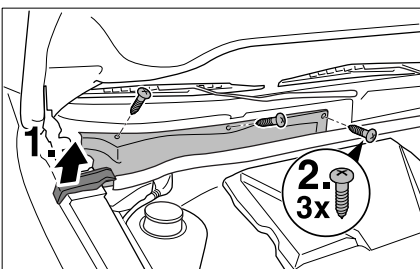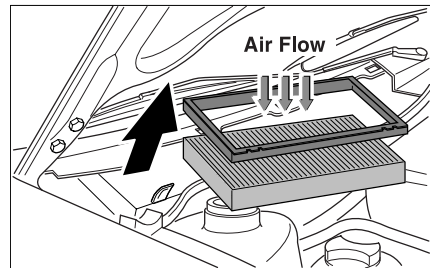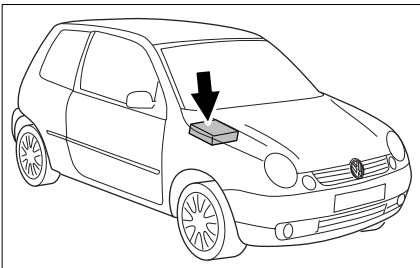

10 VW Lupo

VW Lupo 11


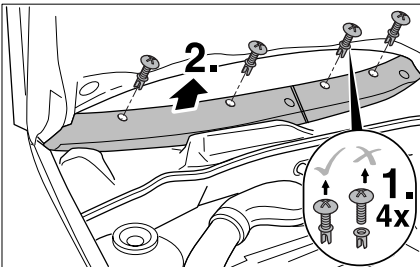
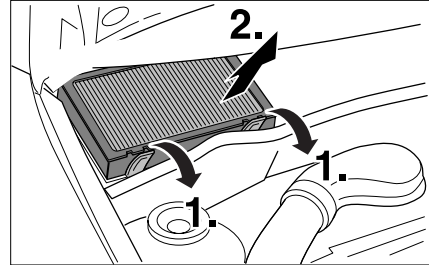
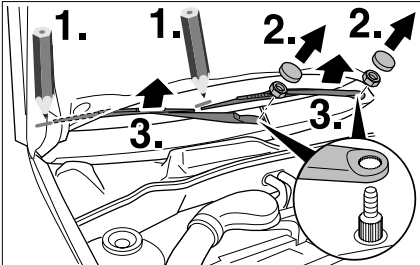
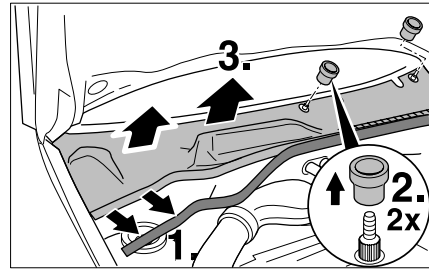
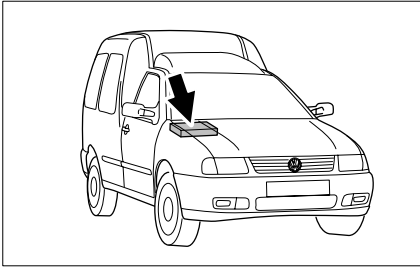


12

VW Caddy

VW Caddy

13

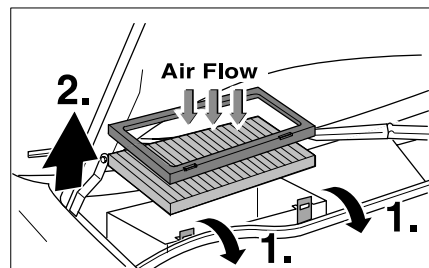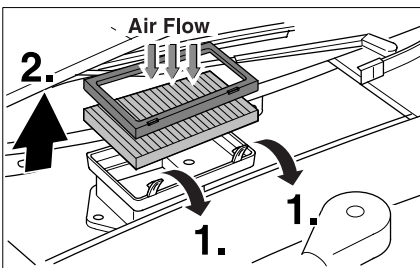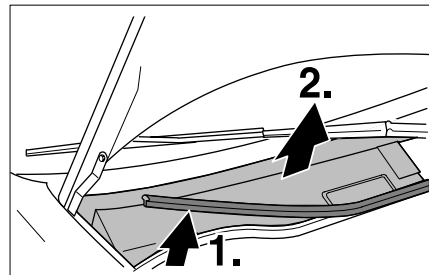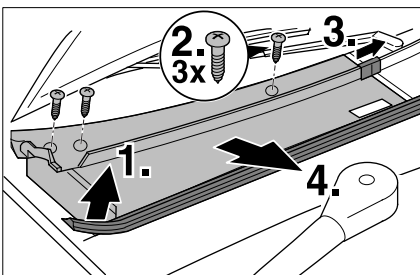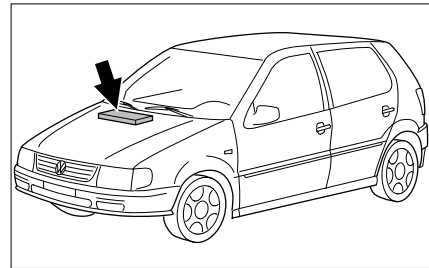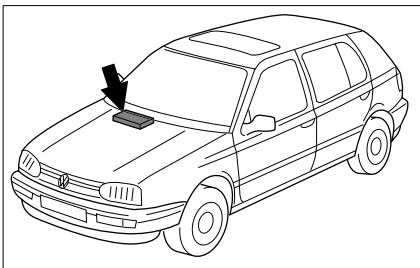

14

VW Golf III / VW Vento

VW Polo

15



## Service

**+49 (0) 180-500 4745**

gebührenpflichtig/subject to charges/payant



Robert Bosch GmbH  
Postfach 41 09 60, D-76225 Karlsruhe  
[www.bosch-automotive.com](http://www.bosch-automotive.com)



Gedruckt auf Recycling-Papier Printed in Germany  
Printed on recycled paper Imprimé en Allemagne